
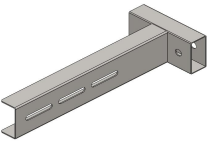

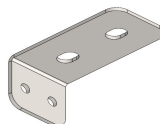



Headboard Bracket Assembly Instruction


Parts/Accessory List

			
Metal Bracket-A * 2PCS	Metal Bracket-B * 2PCS	Connector*2	M10*25 Screw*2PCS
			
Flange Nut * 8PCS	M8*40 Screw * 4PCS	Washer * 8PCS	M8*20 Screw * 4PCS
			
Spanner * 1PCS	Allen Spanner M8* 1PC	Allen Spanner M10* 1PC	


Assembly Steps

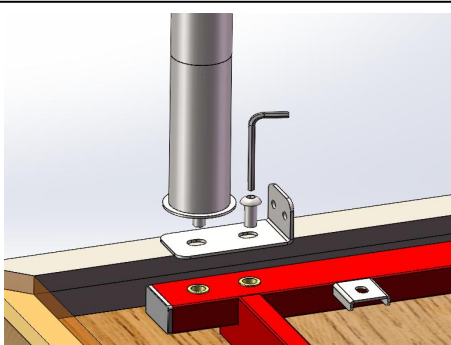

Step1:Fix the connector with leg and 1*M10*25 screw, as shown in the image.Here will need Allen Spanner M10.

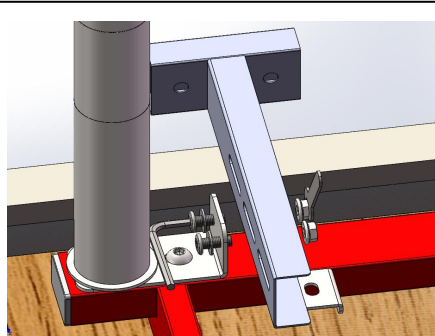

Step2:Fix the Metal Bracket-A with 2*M8*20 screws, 2*nut and 2*washer,as shown in the image.Here will need Allen Spanner M8 and Spanner .

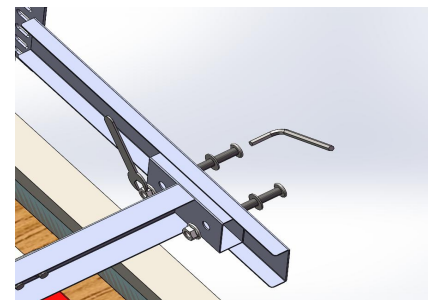

Step3::Fix the Metal Bracket-B with 2*M8*40 screws, 2*nut and 2*washer,as shown in the image.Here will need Allen Spanner M8 and Spanner .