






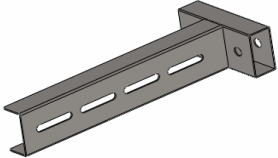


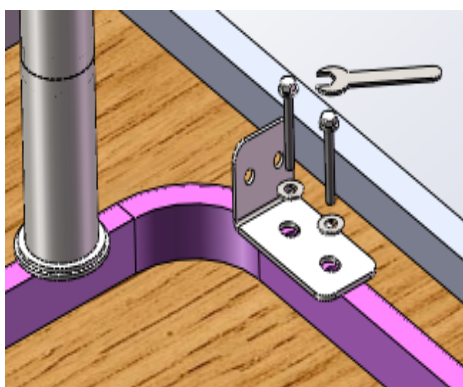


Headboard Bracket Assembly Instruction


Parts/Accessory List

			
Metal Bracket-A * 2PCS	Metal Bracket-B * 2PCS	Connector*2	Flange Nut * 8PCS
			
M8*40 Screw * 4PCS	Washer * 8 PCS	M8*20 Screw * 4PCS	Wrench M 8 * 1PCS
			
Allen Wrench M8* 1PC	Wrench M 6 * 1PCS		


Assembly Steps



Step1:Fix the connector with2* 1/4*42 screw and 2*washer, as shown in the image.
Here will need Allen Wrench.

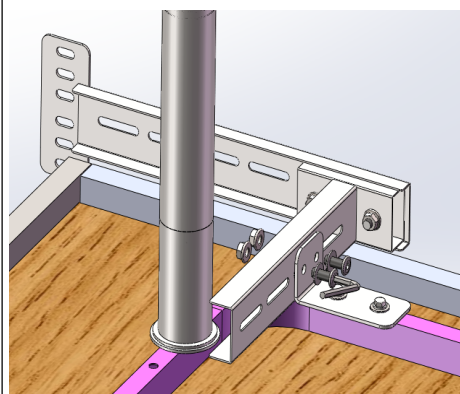

Step2:Fix the Metal Bracket-A with 2*M8*20 screws and 2* nut,as shown in the image.
Here will need Allen Wrench M8 and Wrench .

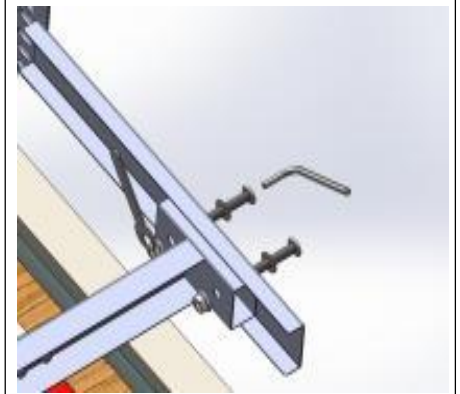

Step3:Fix the Metal Bracket-B with 2*M8*40 screws, 2*nut and 2*washer, as shown in the image.
Here will need Allen Wrench M8 and Wrench .