

Adjustable Bed

MANUAL

sleep
natural™
Motion+



TWIN XL/FULL/QUEEN/KING

Safety Precautions:

Please read all directions before using the product and retain this guide for reference.

- Input voltage: AC 100-240V. 50/60HZ, output: DC29V 2.0A.
- Unplug the product before cleaning it.
- Keep the product wire, power supply, control box away from heat.
- Do not use this product in a humid environment. The connector part of the wire, and the gap between the motor and the control box, cannot be exposed to liquid or high humidity.
- Never operate this product if it has a damaged cord or plug, or is not working properly.
- Unplug the power cord and remove the remote control battery when the product is not used for a prolonged period of time.
- Consult your physician if you have any questions regarding the use of this product.
- Do not let children play with or operate this product.
- Do not allow children or pets underneath the bed.
- Do not go under or behind your adjustable base.

For your safety, it is important to follow these guidelines when using the adjustable base. Going behind or crawling under the adjustable base may result in serious injury or death due to the potential for unexpected movement and malfunction causing you to be pinned under or behind the adjustable base.

****Always ensure the adjustable base is in a stable position and fully stopped before approaching and always flatten your adjustable base when not in use****





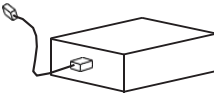
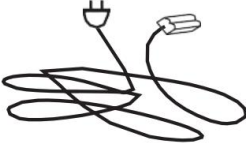
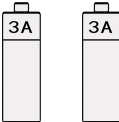

If you experience any issues with the adjustable base, please contact customer support for assistance. Your safety is our priority.

Product Specifications:

Product Size:
TWIN XL: 80”X38”X14” FULL:
75”X54”X14” QUEEN: 80”X60”X14”
KING:80”X76”X14”


Parts List

Adjustable Leg: 6.5”+3”+2”

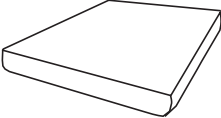
		
Bed Platform x 1pc	Mattress Rail x 1pc	Legs x 6pcs
		
Remote Controller x 1pc	Power Supply x 1pc	Power Cable x 1pc
		
AAA batteries x 2 pcs	User Guide x 1 pcs	

Assembly:



- 1.Lay the carton flat on the floor and carefully cut open.
- 2.Lift carton so that the open side faces down and slide it up and off the bed. Place bed upside-down flat on the floor.
- 3.Remove and discard plastic bag. Put together the tow pieces of the bed and align them flat on the floor.
- 4.Cut the zip ties, take out all the part boxes and the mattress rail, check that you have all the necessary parts according to the parts list.
- 5.For leg assembly push the screw through the triangular brace.Screw in the leg and tighten.
Leg height adjustments: 6.5"+3"+2"

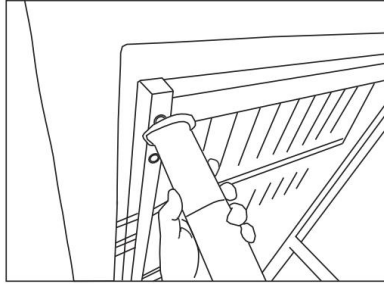



- 6.Connect the wire (on the bed) to the jack of power supply box Connect the AC power cable to the other jack on the power supply box. Connect the AC power cable to your nearby power outlet.

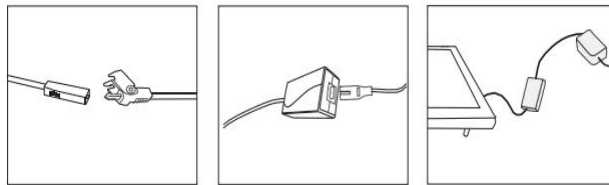


- 7.Insert batteries into the remote control. Press the first circled button.
If the motor begins to run, unplug the power supply and turn the bed over to its right side-up position.
If the motor does not run, it needs to re-match its code.
Matching code:
Press the two buttons in the circles shown and at the same time press the blue reset button in the circle shown until you hear the 'didi' sound.

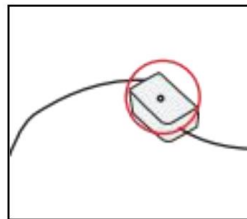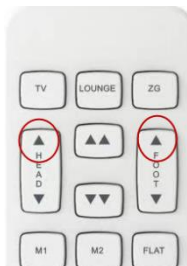



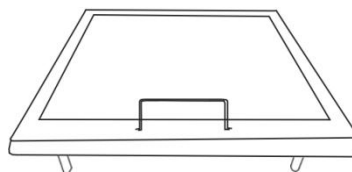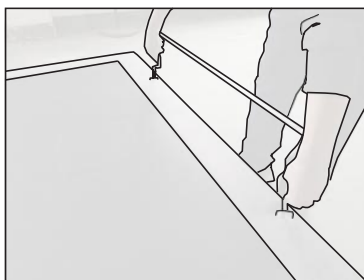



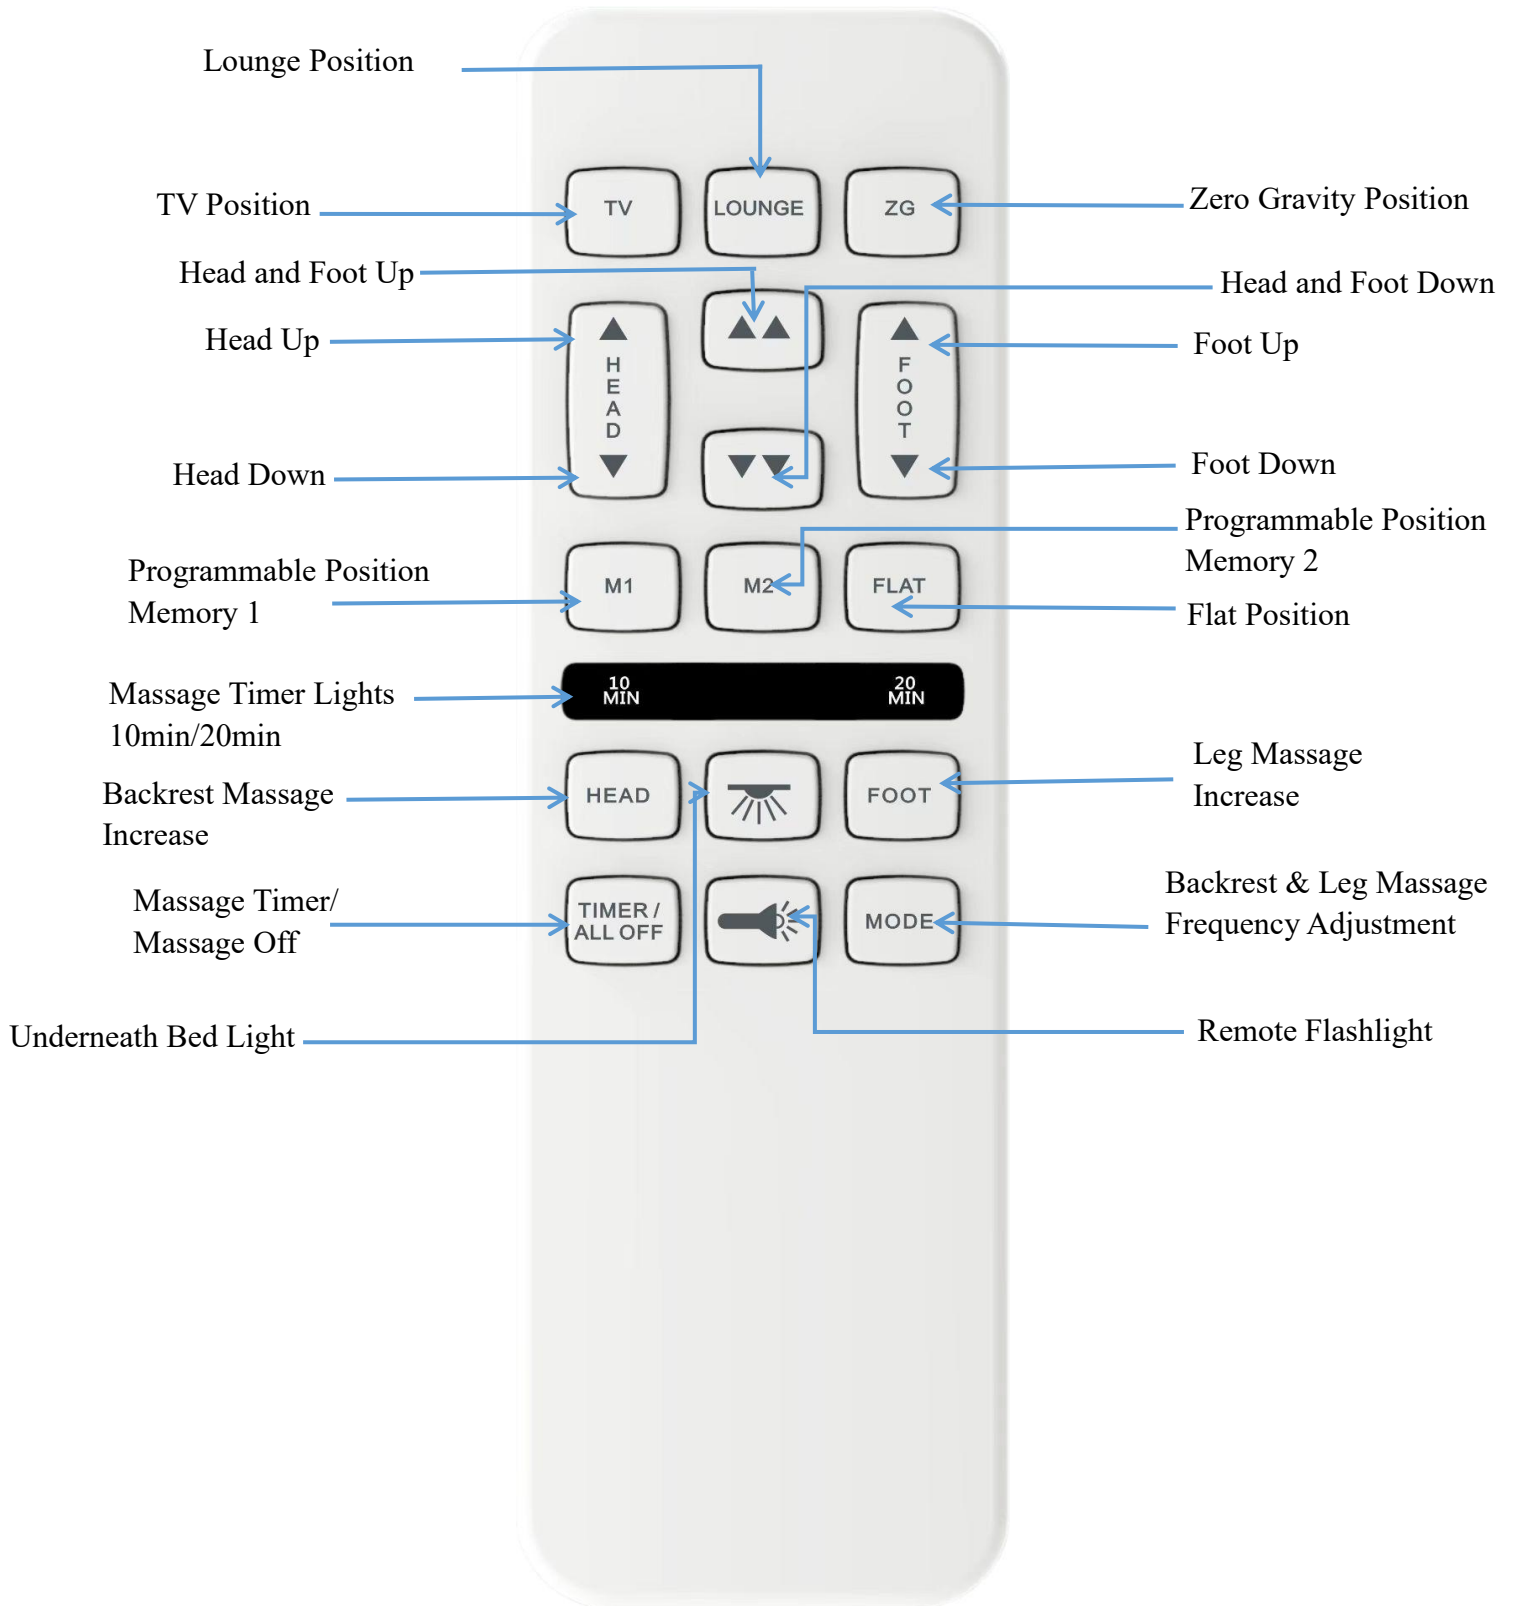











- 8.Insert the mattress rail at the foot of the bed. Then the bed is ready for use.



Remote Control Functions



Button	Operation	Button	Operation
	Press and hold to raise the backrest. Let go when desire position is reached.		Press and hold to raise the legs. Let go when desire position is reached.
	Press and hold to lower the backrest.. Let go when desire position is reached.		Press and hold to lower the legs. Let go when desire position is reached.
	Press and hold to raise both legs and backrest. Let go when desire position is reached.		Press and hold to lower both legs and backrest. Let go when desire position is reached.
	Click to flatten the bed.		Click to reach TV position. (Factory setting: Backrest 45°,Legs 27°)
	Click to reach Zero Gravity position. (Factory setting: Backrest 17°,Legs 36°)		Click to reach Lounge position. (Factory setting: Backrest 30°,Legs 16°)
	Click to set a user-defined position.		Click to set a user-defined position.
	Click to start backrest massage. Click again to increase the intensity of massage in stages.		Click to start leg massage. Click again to increase the intensity of massage in stages.
	Set massage time: 10min and 20min.		Adjust massage frequency.
	Click to turn LED flashlight on top of the remote on and off.		Click to turn under-bed LED light on and off.


Memory Setting:

Setting M1 & M2 positions, and resetting the TV/LOUNGE/ZG positions if you are not satisfy with factory setting.

1.Press FLAT button to flatten the bed.



2. Adjust the bed to your preferred position by pressing head and foot up/down button

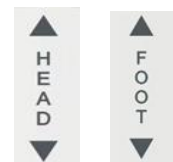

3. Press and hold the setting button M1/M2/TV/LOUNGE/ZG, let go after hearing the “didi” sound, that indicates the setting has been successfully programmed.

4.Repeat the process for a second setting.

Remote Controller Lock Setting:

1.Press the head down and the foot up buttons at the same time, the blue backlight start flashing to indicate that the remote controller has been successfully locked.


This is to prevent children’s misoperation.

2.Repeat the process to unlock the remote controller.



Emergency Reset:

If you temporarily cannot reach the remote controller, press the little button on the extension wire to return the bed to flat position.

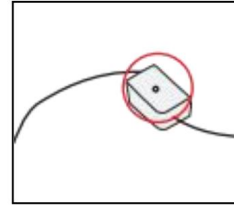


Bluetooth APP:

1. The mobile phone scans the QR code below and enters the browser to download apprmcontrol.



2. ①After the Android mobile phone scans the QR code, enter the following interface. Please click "Android (China)" in China to download; Outside China, please click "Android (global)" to download.

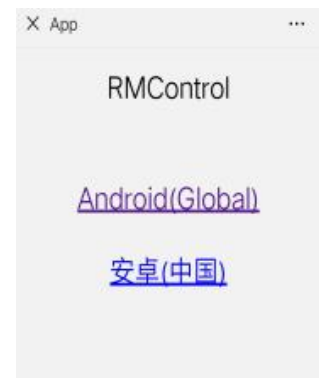


- ②After the iPhone scans the QR code, enter the following interface. Please click "IOS" to download.




3. Open the AppRMControl software link to "QRRMXXXXXX" 10 digit device.



4. ①Click the "QRRMXXXXXX" 10 digit device, scan the QR code, and the operation interface appears. At this time, the mobile phone can control the operation of the motor (clear the link in case of power failure).

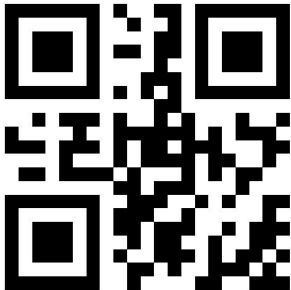

- ②Click "QRRMXXXXXX" 10 digit device, enter "XJRM", click search, and the operation interface will appear. At this time, the mobile phone can control the operation of the motor (clear the link in case of power failure).

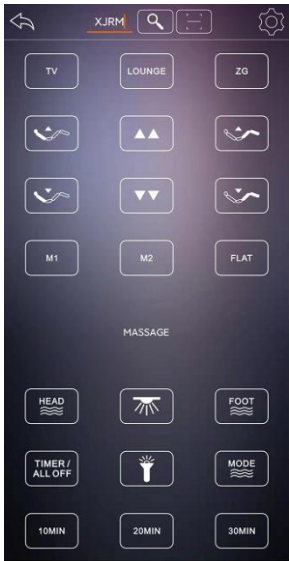

Troubleshooting:

If you experience problems with your adjustable bed, please follow these steps:

- 1.Press any button on the remote controller to see whether the blue backlight is bright. If it is dim or does not light, check the battery.
- 2.Check the green power indicator light on the power supply. If it is not lighted, check the power outlet.
- 3.Check for loose wires or connectors.
- 4.Check if the adjustable bed is assembled according to above steps.

If your problems cannot be solved by above steps, please contact us.

How to Sync Remote:

- 1.You just need to use a remote control, other remote controls need to be put in the box, can wait for the next use!
- 2.You need a remote control to match code each bed
- 3.How to match code? Pls see Assembly 7. All beds require repeated operation.
4. Then a remote control can control all beds.

THANK YOU FOR YOUR PURCHASING ADJUSTABLE BED